

INSTALLATION & SET-UP SCOPE OF WORK GUIDE



MG1532 MIXER-GRINDER

Procedures and Scope of work for installing an MG1532 Mixer-Grinder.

The MG1532 is included in the Retail Installation Credit (WRN Claim) program.

SCOPE OF WORK

KROGER/GENERAL CONTRACTOR RESPONSIBILITIES:

- Receive, Uncrate and Set in Place the MG1532 Mixer-Grinder
- Install Casters
- Provide Electrical Outlet
- Cord & Plug Provided by Hobart and is Shipped with Unit.
- **DAMAGED SHIPMENTS OR SHORTAGES**

Any shortages and/or visible damage must be marked on the freight bill at the time of delivery. If damages are found, the local office of the carrier must be notified at once and an inspection requested. Also, notify Hobart Customer Service. If the delivery receipt is signed clear and concealed damage is found, the carrier must be notified and inspection requested within 15 days of delivery.

Hobart Corporation will take care of filing carrier claims for lost or damaged shipments. The local Hobart office can ascertain if the unit can be repaired in the field or at their location. Should replacement of unit(s) or parts be necessary, contact your Hobart representative or the Customer Service Department.

INSTALLING HOBART OFFICE RESPONSIBILITY:

- Assemble and Install Foot Switch and All Accessories
- Start Up Unit and Test Operation
- Customer Demo/Training*
 - Demonstrate Controls, Cleaning and Maintenance Procedures to Meat Personnel
 - Emphasis on Removing Seal and Properly Installing Cylinder Head Bolts

* For details, refer to the Instruction Manual or Operator Training Video,
Available at www.Hobartcorp.com/Kroger